

# TP-405P OPERATION MANUAL

## 1. MAIN FEATURES:

This product is 4 ch. Chaser power pack, has LED indicator itself, and can supply DC 20V to controller, load max. 10A per channel. There are two types selectable: AC 120V/60Hz and AC 230V/50Hz

## 2. SPECIFICATIONS:

POWER INPUT :AC 120V~60Hz or 230V~50Hz


OUTPUT: DC +18V MAX. 350mA

DIMENSIONS: 220x180x120mm

WEIGHT: 2.4Kg


# 3. FUNCTION AND CONNECTIONS:


#### **FRONT PANEL**

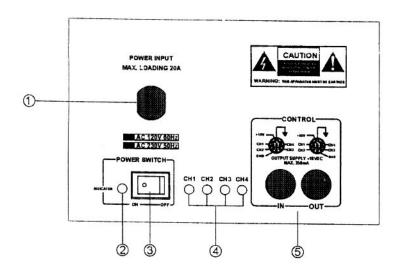


# POWER INPUT Use to plug in appropriate power supply.

  - 2). Power indicator.
- 3). Power switch: when switch to the left, the power is on; when switch to the right, the power is off.
- 4). Each channel LED indicator (ch1-ch4): When the indicator is on , the channel output is effective.
- 5). 8p input and output signal control connection, shown as below figure:





#### **REAR PANEL**

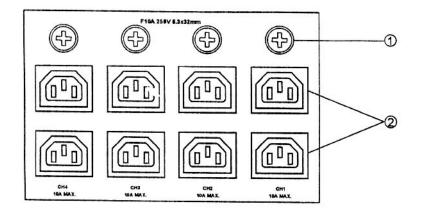

1. INTERNAL FUSE :F10A 250V 6.3x32mm

2.CHANNEL OUTPUT: 10A PER CHANNEL MAX.

#### **CAUTION:**

- 1. THIS APPARATUS MUST BE EARTHED .
- 2. HIGH VOLTAGE INSIDE, DO NOT OPEN THE COVER.
- 3. DISCONNECT THE POWER CABLE WHEN REPLACING THE FUSE.
- 4. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

